

	<b>AirIM-100</b> Univerzální modul	✓ AirIM-100S	✓ AirIM-100L	✓ AirIM-100NB
	<b>AirIM-100/M</b> Univerzální modul	✓ AirIM-100S/M	✓ AirIM-100L/M	✓ AirIM-100NB/M
	<b>AirSF-100</b> Záplavový detektor	✓ AirSF-100S	✓ AirSF-100L	✓ AirSF-100NB
	<b>AirWD-100</b> Magnetický detektor	✓ AirWD-100S	✓ AirWD-100L	✓ AirWD-100NB
	<b>AirMD-100</b> Pohybový detektor	✓ AirMD-100S	✓ AirMD-100L	✓ AirMD-100NB
	<b>AirSD-100</b> Detektor kouře	✓ AirSD-100S	✓ AirSD-100L	✓ AirSD-100NB
	<b>AirQS-100</b> Senzor kvality vzduchu (CO <sub>2</sub> )	✓ AirQS-100S	✓ AirQS-100L	✓ AirQS-100NB
	<b>AirQS-101</b> Senzor kvality vzduchu (CO)	✓ AirQS-101S	✓ AirQS-101L	✓ AirQS-101NB
	<b>AirTM-100</b> Převodník pulzů	✓ AirTM-100S	✓ AirTM-100L	✓ AirTM-100NB
	<b>AirDAC-100</b> Ovládací prvek	-	✓ AirDAC-100L	✓ AirDAC-100NB
	<b>AirSLC-100</b> Obousměrný komunikační modul	-	✓ AirSLC-100L	✓ AirSLC-100NB
	<b>AirPS-100</b> Parkovací senzor	✓ AirPS-100S	✓ AirPS-100L	✓ AirPS-100NB
	<b>AirSOU-100</b> Senzor stmívání osvětlení	✓ AirSOU-100S	✓ AirSOU-100L	-